

Start System Troubleshooting: (kick start, e-start)

- kick start

no kick pressure

- worn or broken kick clip

kickstart doesn't return

- broken hook on spiral spring – either end
- broken spiral spring anchor point

kickstart wont fold in or out

- bearing stuck, spring broken or rusted

more info [kick start](#)

- electric start

spins - noisy

- worn bendix and or primary gear

spins but not the motor

- worn bendix spring

engine turns slowly

- low battery
- bad battery terminals
- oil too heavy
- starter brushes worn
- armature bushes worn

starter doesn't turn

- low battery
- starter brushes worn
- armature bushes worn
- starter oil seal leaking

starter clicks

- flat battery
- loose or dirty battery terminals
- solenoid broken

nothing happens

- broken or loose connections in the starter button
- battery loose or disconnected

more info [E-start](#)